Installation of Brackets

- ① Install bracket over top front screw, angling slightly as shown in Figure 3.
- 2 Push down on top of bracket (see Figure 4).
- ③ Push lower part of bracket over the bottom rear screw (see Figure 4).




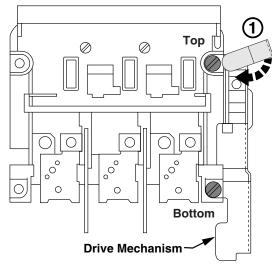


Figure 3

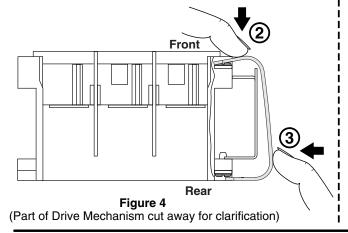

- (4) Install second bracket over bottom front screw, angling slightly while going over drive mechanism as shown in Figure 5.
- 5 Push down on top of bracket (see Figure 6).
- 6 Push lower part of bracket over the bottom rear screw (see Figure 6).

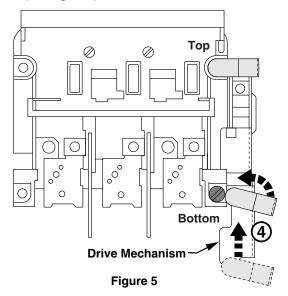

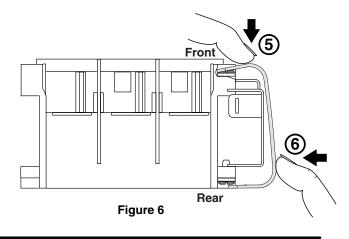

IMPORTANT: Verify that each bracket is covering both screwheads. Once the brackets are aligned, disconnect can be turned on. However, do not disturb either bracket until adhesive has cured (24 hours). This tube of adhesive can be used for (10) brackets

